

# Doing it right since 1968

## USER GUIDE

The correct use and maintenance of your windows, doors and conservatory.

## MAINTENANCE INSTRUCTIONS

Although replacement PVC-U window and door products are predominantly maintenance free, the following guide lines should ensure that you receive many years of trouble free service.

## LUBRICATION

Due to normal operation and atmospheric conditions, the moving mechanical parts of the doors and windows may require lubrication.

Keep plates, locks and hinges of both windows and doors will benefit from light application of oil/grease to the contact area of moving parts.

As a general rule, lubrication should be required once every 12 months depending on usage.

NB: Under no circumstances attempt to dismantle any components. If you require further assistance please contact DL Windows directly.

## CLEANING

### (PVC-U Frames - White)

Under normal circumstances the washing down of window and door frames with diluted washing up liquid and water will suffice. However, where more stubborn marks or a build up of atmospheric grime exist, a non-abrasive cream cleanser specially designed for PVC-U profile should be used.

Apply the cleaner to the affected area using a dry clean cloth. Use sparingly applying gentle pressure in small circular motions.

Buff back to shine.

### (PVC-U Frames - Woodgrain)

Use only diluted washing up liquid and water.

NB: Under no circumstances use any other cleaner than those advised by DL Windows. Other cleaners not recommended may have an adverse effect on the surface finish of your windows.


## FRICITION STAY ADJUSTMENT

The majority of opening windows are fitted with a friction stay which is a type of hinge that controls the opening of the window itself. This is factory set so that the window neither closes under its own weight if it is overly difficult to open and close. After a period of time, the friction pad may wear making the opener loose in operation.

Take a small bladed screwdriver and turn the screw by half a turn clockwise.

The adjustment should be made equally to each pair of hinges. If this adjustment is insufficient then carry on turning the screw in half turn increments until the desired amount of friction is achieved. If opener is still very stiff in operation, turn the screw by a quarter turn increments anticlockwise until desired result is achieved.

NB: If you have difficulty in making the above adjustments please contact DL Windows directly for guidance.

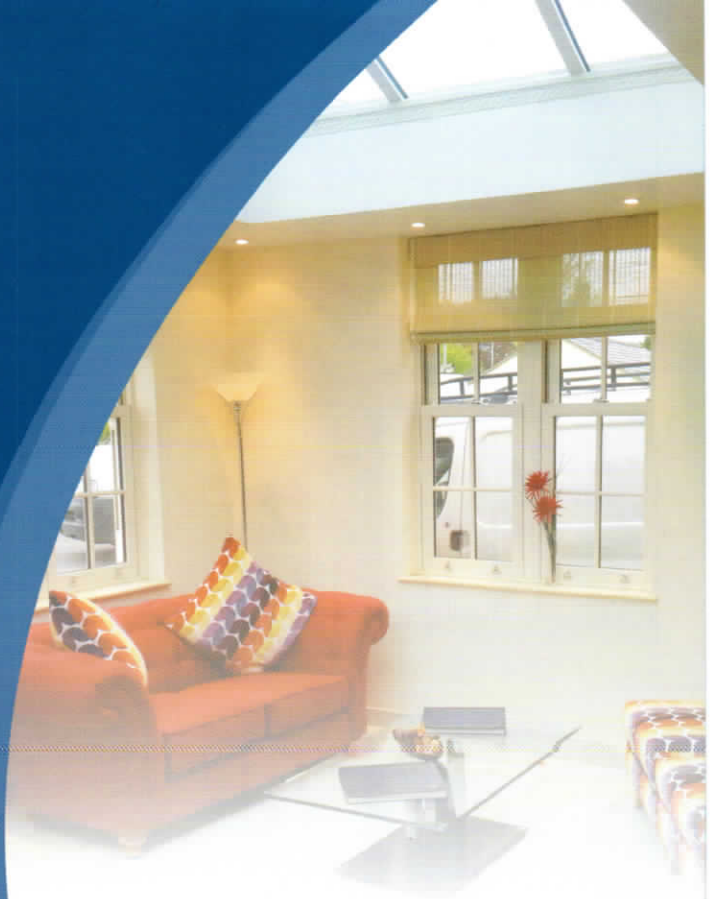



**DL Windows**

## PRODUCT OPERATION

DL's window and doors are fitted with key activated push button locking handles. When depressed the push-in button allows the handles to be turned to open the windows. The keys supplied can be used to lock the handle for a high level of security.



For security reasons, DL Windows would advise that the Key is removed from the window and door when not in use and stored in a safe place, but easily accessible by the whole family in the case of a fire or other emergency.

### Casement Window Side Hung Window

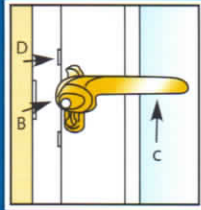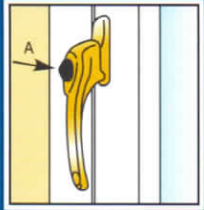



- A Unlock window handle with key
- B Push in locking button
- C Rotate handle through 90°
- D Push Open Window

### Top Hung Window

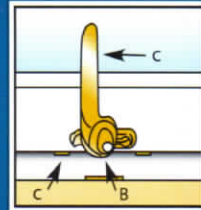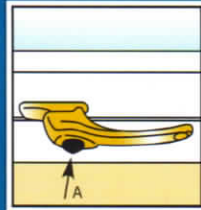



- A Unlock window handle with key
- B Push in locking button
- C Rotate handle through 90°
- D Push Open Window

### Tilt and Turn Window Tilt only operation

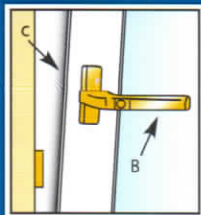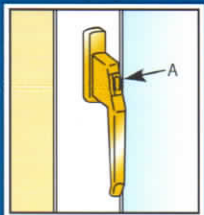




- A Turn key 90°
- B Rotate handle through 90° from closed
- C Tilt open window

### Turn and turn operation

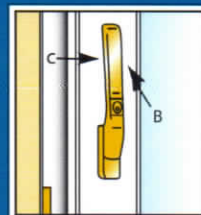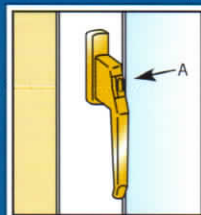





- A Turn key 180°
- B Rotate handle through 180° from closed
- C The window can now be opened to the tilt or turn position

### Residential Door

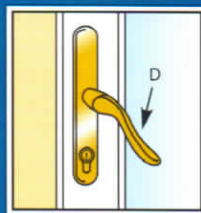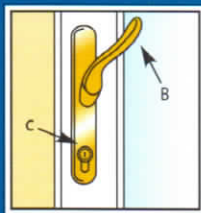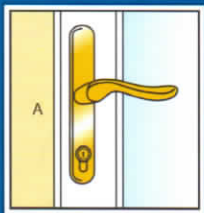


- A Door unlocked
- B & C To lock - lift handle to its upward position, insert key and turn clockwise
- D To unlock - turn key anti-clockwise and push handle downwards

### French Door

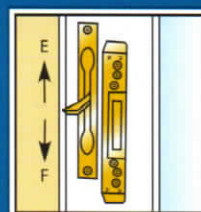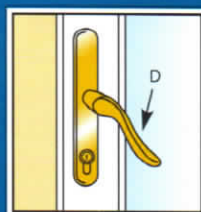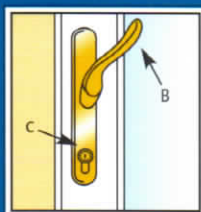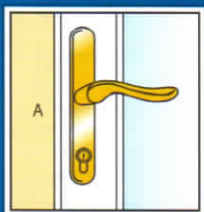

- A Door unlocked
- B & C To lock - lift handle to its upward position, insert key and turn clockwise
- D To unlock - turn key anti-clockwise and push handle downwards
- E & F Operate top and bottom levers on other doors to open

### Inline Patio Door

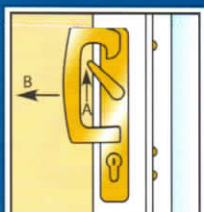

- A To unlock - insert key, turn anti-clockwise and push lever upwards
- B Pull handle to slide open door
- C To lock - slide door to fully closed position, push lever downwards and turn key clockwise

127 Malmesbury Road, Chippenham, Wiltshire, SN15 1PZ

T: 01249 464999 F: 01249 464888 E: [info@dl-windows.co.uk](mailto:info@dl-windows.co.uk) W: [www.dl-windows.co.uk](http://www.dl-windows.co.uk)